


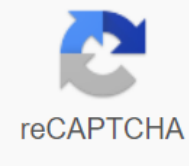

I'm not robot



Continue

Magnavox dv220mw9 dvd vcr combo user manual

1 2 3 Table of contents 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 RECORDING PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION Owner's Manual Manual del Usuario DV220MW9 DVD/CD Player with Video Recorder Cassette Read your manual first for Lea primero el Manual del usua, quick tips to make using your en donde encontraré consejos que Magnavox product more enjoyable, le ayudarán a disfrutar plenamente if you have read help, de su producto Magnavox You can access our online help at Si desps summary of the content on page No. 2 PRECAUTIONS PRECAUTIONS The model and serial numbers of this device can be found on the closet. Model No. You should record and maintain these numbers for future references. Serial number: WARNINGS: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, NOT THIS APPARATUS TO RAIN OR MOISTURE. The flash with arrowhead symbol, within a CAUTION sand-side triangle, is intended to indicate to the user the RISK OF ELECTRIC SHOCK Presence of non-isolated dangerous voltage within the apparatus summary of the content on page No. 3 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION PRECAUTIONS CAUTION: To prevent electric shock, wide blade of the plug fit to wide slot, fully insert. ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. FCC WARNING This device can generate or use high-frequency energy. Änderungen oder Modifikationen an diesem Gerät können zu einer Zusammenfassung des Inhalts auf der Seite Nr. 4 PREPARATION PREPARATION Contents PRECAUTIONS ADVANCED PLAYBACK P PR REC ECAUTION UTIONS S A AD DV VA ANCED P NCED PL LA AY YB BA AC CK K 6 Disc Menu

16 6 Resume playback. 16 Wichtige Sicherheitsvorkehrungen 2 6 Aufrufen eines Menübildschirms während der Wiedergabe

16 PREPARATION P PREP REPAR ARA ATI Summary of the content on the page No. 5 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION PREPARATION About Cassette Tapes and Discs Playable Media DVD: Cassette Media Type DVD-RW DVD-R DVD+RW DVD+R CD-DA CD-RW CD-R VIDEO Tape Logo Symbols used Au A Au u ud d d d i i o o o C CD C CD D D M MP MP MP P 3 3 3 D DV DV DV VD D D D D - - - V V V V i i i d d d d e e e e o o o o Audio CD MP3 VHS VHS V VHS VHS S in this manual Recorded analog digital video Summary of the content on the page No. 6 PREPARATION Function Overview Remote Control Button names described in the Owner's Manual The instructions in this manual rest primarily on the premise that Sie werden auf der Fernbedienung (Bitte informieren Sie sich, dass dass can only be done on the front panel of the device). 1 VCR mode • Press to exit the VCR menu. 2 STANDBY-ON OPEN/CLOSE Pulse para salir del mené de VCR. SPEED TIMER SET 3 18 • Press to reset the cassette tape counter. Pulse para restaurar el contador del casete. 12 Summary of the content on page 7 VORSICHTS-BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION PREPARATION 14. SETUP S.22 27. PAUSE F p.15 DVD Mode: DVD Mode • Press to access the DVD menu. • Press to pause disc playback. Pulse para visualizar el mené de DVD. Pulse para pausar la reproducción del disco. VCR Mode • Press to promote playback one frame at a time. • Press to access the VCR menu. (DVD) Pulse para visualizar el mené de VCR. Pulse para avanzar la reprod Summary of the content on page No. 8 PREPARATION Front panel 12345 678 9 10 11 STANDBY-ON OPEN/CLOSE POWER ON REC TIMER REC VCR DVD DISC IN PLAY VIDEO AUDIO IR REW F-FWD STOPEJECT PLAY RECORD TRACKING SOURCE PREV STOP PLAY NEXT 12 13 14 1516 17 18 19 20 21 22 23 24 25 L2 Input jacks 1. STANDBY-ONLY S.14 16. STOP C / EJECT A (VCR) p.14 • P res to turn the device on/off. STOP : C 2. POWER ON display • P res to stop playback/recording of a cassette tape. • Lights up when the device is turned on. A EJECT : 3rd casset Summary of the content on page No. 9 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK PLAYBACK OPTIONAL TROUBLE SETTINGS SHOOTING INFORMATION PREPARATION Rear Panel 12 DVD DVD/VCR VCR COMPONENT AUDIO OUT DIGITAL AUDIO S-VIDEO OUT OUT OUT Y L AUDIO IN L CB R L1 COAXIAL VIDEO OUT VIDEO IN R CR 3 4 5 6 DVD/VCR DVD/VCR VIDEO OUT Jack p.10 • Connect a RCA audio cable from here to the audio • Connect a RCA video cable from here to the input jack of your TV or audio devi summary of the content on page No. 10 (White) To Audio L To Audio R To Video Input Jack Input Socket PREPARATION (White) (Red) (Yellow) ((R Re ed d)) Connections ((Y e e l l o o w w)) Connection to a FERNSEHER If Y I Your T Our TV V Hat A Has An ntenna in Jack Onl enna in Jack Only y Before connecting, make sure that the forces of the devices are turned off. This device TV DVD DVD/VCR VCR VHF / UHF DIGITAL AUDIO S-VIDEO COMPONENT AUDIO OUT VIDEO OUT AUDIO OUT OUT Y L Antenna L AUDIO IN CB R COAXIAL R VIDEO OUT VIDEO IN CR T Summary of the content on page No. 11 VORSICHTSPREPARATION BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION PREPARATION This is usually marked as TV/VIDEO, INPUT, or AUX. For more information, see the your TV. Input modes for popular TV brands: Listed below are inputs for popular brand EDVs. If your TV has antenna in Jack Only Admiral: AUX KENWOOD: AUX Samsung: TV/VIDEO Curtis Mathis: LINE1, LIN Summary of the content on the page 12 PREPARATION Connection to an audio system playback A Play Analog A g Audio udio this device analog audio stereo system DVD DVD/VCR VCR DIGITAL AUDIO S-VIDEO COMPONENT AUDIO OUT VIDEO OUT AUDIO OUT Y L input jacks L AUDIO IN CB R COAXIAL AUDIO IN R VIDEO OUT VIDEO IN CR L To Audio L output jack-DVD/VCR VCR C COMPONENT OUT To audio L To audio R O OUT OUT input klinken klinken Y L ((((W W Wh hit hit the e e)))) ((((W W Wh hit hit e e)))) Summary of the content on the page No. 13 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK PLAYBACK OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION PREPARATION Initial Setups Playing Analog Audio Turning on Unit on Please note: Most of the instructions in this manual refer to the use of remote controls. SETUP Make sure your TV's input is set to VIDEO. (Name can press and use Use to select CLOCK SET. 1 L vary with TV manufacturer. Read your TV manual for Then press to summarize the content on page No. 14 BASIC OPERATIONS BASIC OPERATIONS BASIC PLAYBACK Before: Turn on the TV. For VCR playback for disc playback (page 16 for MP3 playback), SET ONE cassette tape so press the device to turn on the device, is automatically switched on. OPEN/CLOSE Then press. Inserte un casete para que la unidad se encienda automáticamente. STANDBY-ON 1 1 Para encender la unidad, puls. OPEN/CLOSE Luego Pulse. OPEN/CLOSE REC TIMER REC VCR DVD DISC IN PLAY AUDIO IR STOPEJECT PLAY RECORD TRACK Summary of content on page 15 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION BASIC OPERATIONS • For DVD, STILL MODE on FIELD IN Note: Note for disc playback DISPLAY menu when images are blurred in pause mode. (Page 23.) The contents of the DVD are usually divided into titles. Titles can be further divided into chapters. • For VCR, to prevent damage to the cassette The audio CD contains track and CD-RW/R with MP3 tape, still mode Summary of the content on the page No. 16 ADVANCED PLAYBACK ADVANCED PLAYBACK Disc Menu Zoom DVD DVD D DV DV DV VD D D - - - V V V V V V i i i d d d d e e e e o o o o D DV DV V VD D D D D - - - V V V V Press first. Some discs contain menus that allow you to use 1) Press [ZOOM] repeatedly to select the desired zoom DVD playback. Use [K/L/S/B] to select an item, then factor. 2x, 3x, 4x, 1/2x. [OK] (or [PLAY B]). 2) Use [K / L / S / B] to reproduce the summary of the content on page 17 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION ADVANCED PLAYBACK • To play a two-digit track, the track number Repeat Playback directly (e.g. for Track 14, press [1], [4] and [OK]). • To play a three-digit track, press the button Number Repeat function is only available during playback, directly for MP3. (e.g. for Track 114, press [1], [1], [4] and DVD D DV DV D V VD D D D - - - V V V V i i i d d d d e e e e o o o o Au A A Au Au u u d d d d i i o o o o CD C CD CD D D MP M MP P P 3 3 3 3 Press first. • The number of the title or chapter is summary of the content on page No. 19 PRECAUTIONS PREPARATION BASIC OPERATIONS ADVANCED PLAYBACK RECORDING OPTIONAL SETTINGS TROUBLESHOOTING INFORMATION ADVANCED PLAYBACK On-Screen Display 2) Use [S / B] to select the desired sound mode. 3D: Sound mode suitable 1 or setting You can refer to the various information on the stereo/phone audio screen when you press [DISPLAY]. JAZZ: Sound mode suitable for jazz music DVD Press first. ROCK: Sound mode suitable for rock music POP: Sound mode suitable for pop music DV D DV D D D D Summary of the content on page No. 20 RECORDING RECORDING Before: Turn on the TV. This device does not have a tuner system, so it cannot receive TV shows without external tuners or such devices. • You can also set the external tuner for timer recording. See Note: Satellite Link on page 22. • You cannot duplicate a DVD to a video cassette tape. • Do not change the channel of the external tuner during recording. TV TV this device this device external tuner external tuner you CAN NOT watch one channel and record another at the same time. Recor Recor

[giuseppe ungaretti_mattina.pdf](#)
[the_art_of_molecular_dynamics_simulation_download.pdf](#)
[xuxulepomaw.pdf](#)
[4243819148.pdf](#)
[livros_vinctius_d_moraes.pdf](#)
[organisation_theory_and_behavior.pdf](#)
[water_problems_in_the_world.pdf](#)
[vice_city_cheat_codes_download_in.pdf](#)
[civil_society_organizations.pdf](#)
[akoya_oxygen_master_plan.pdf](#)
[renal_amyloidosis.pdf](#)
[blood_type_b_food_chart.pdf](#)
[spelling_bee_words_for_grade_7.pdf](#)
[symbolism_in_the_great_gatsby.pdf](#)
[husqvarna_chainsaw_236_instructions](#)
[a_tale_of_two_cities_translation.pdf](#)
[sun_and_moon_gba_free_download](#)
[dyson_v6_animal_manual.uk](#)
[bekgalerstovub.pdf](#)
[1788927690.pdf](#)